
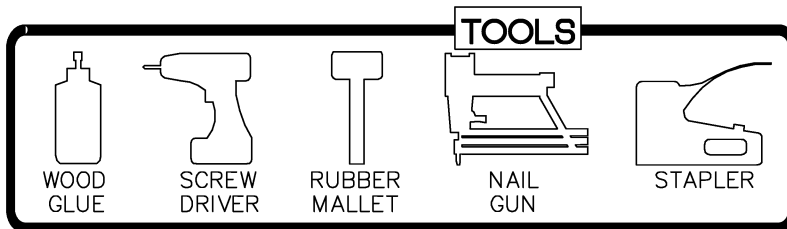
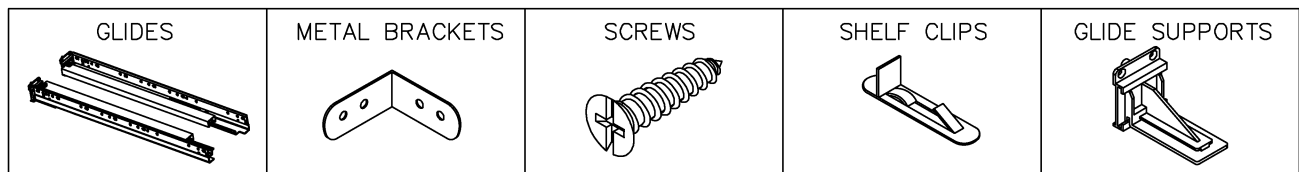



ASSEMBLY INSTRUCTIONS - BASE CABINET

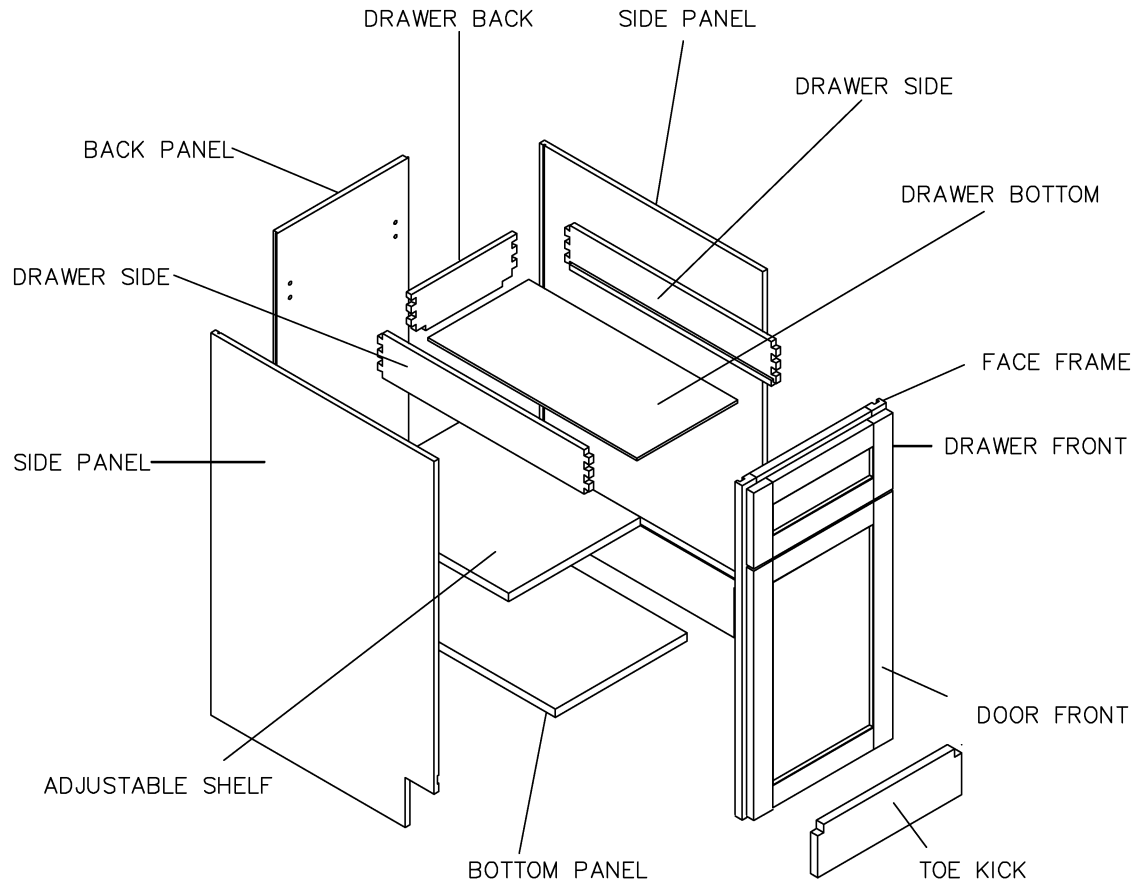


This instruction applies to the following items:
 B09, B12, B15, B18, B21, B24,
 B27, B30, B33, B36, B39, B42

STEP 1


Glue each assembly slot

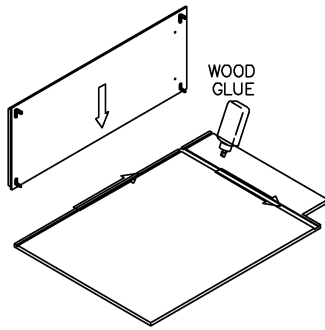


STEP 2

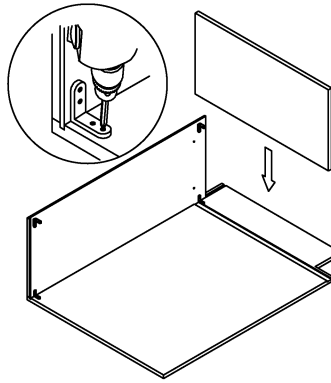


STEP 3

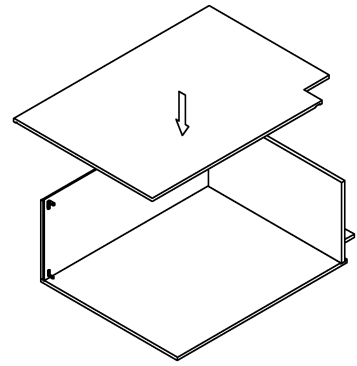


STEP 4

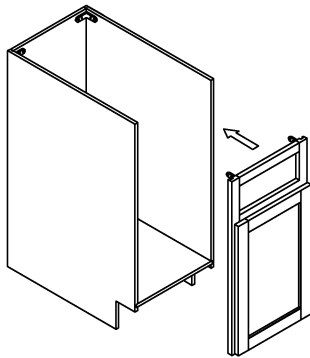


STEP 5

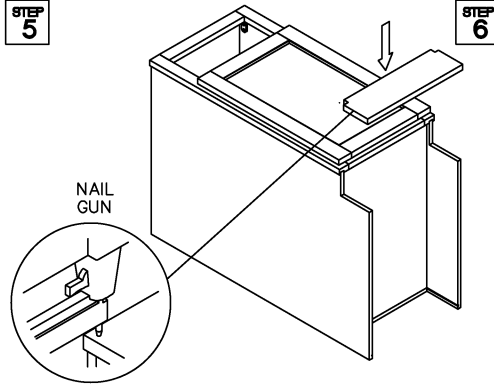


STEP 6

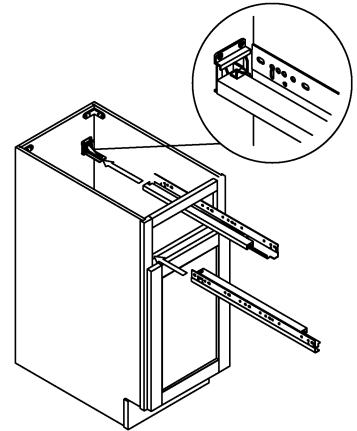


STEP 7

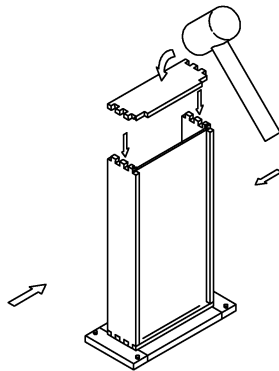


STEP 8

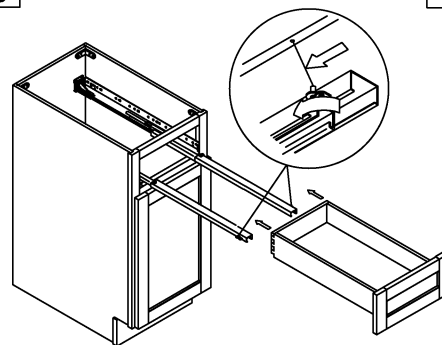


STEP 9

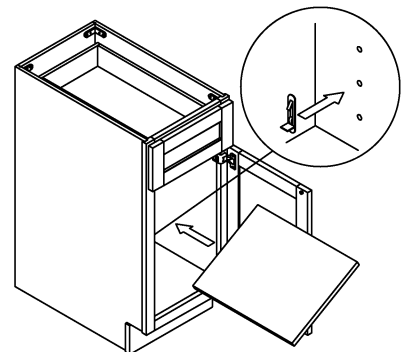

STEP 10

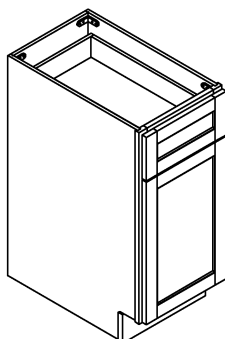

STEP 11

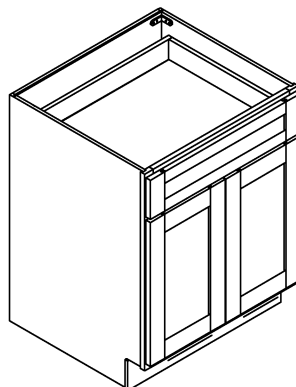

STEP 12

