
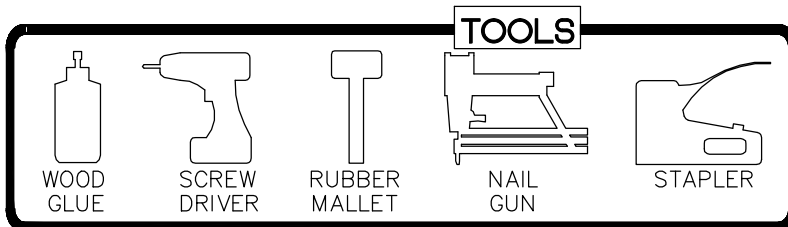
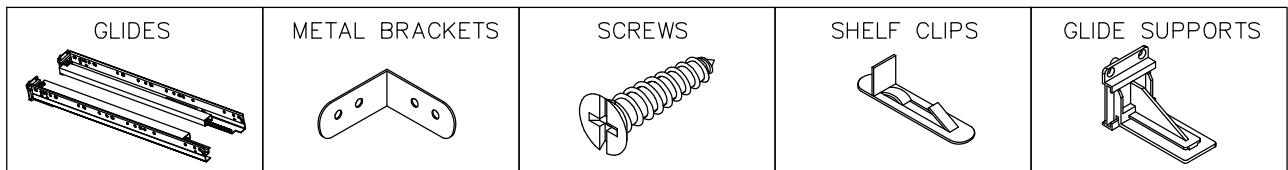



# ASSEMBLY INSTRUCTIONS - COUNTER LINEN CABINET

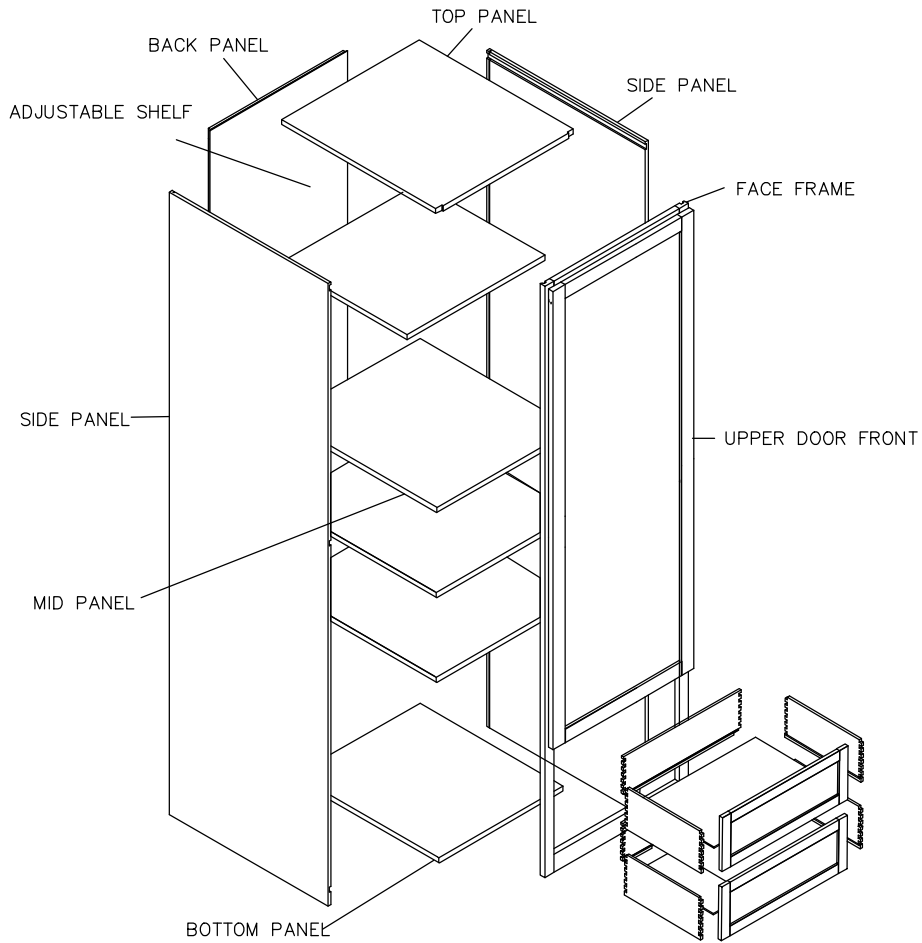


This instruction applies to the following items:  
CL156012

STEP 1


Glue each assembly slot

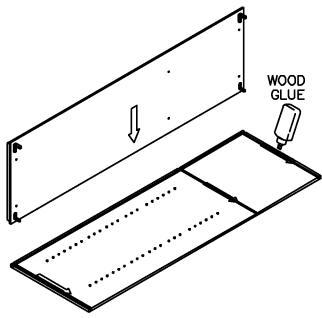


STEP 2

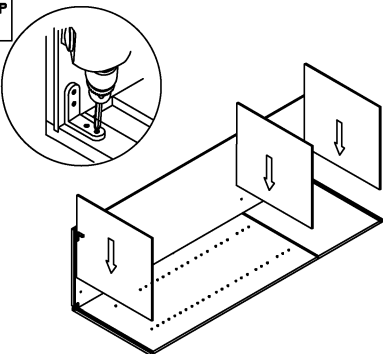


STEP 3

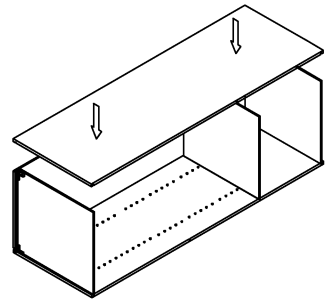


STEP 4

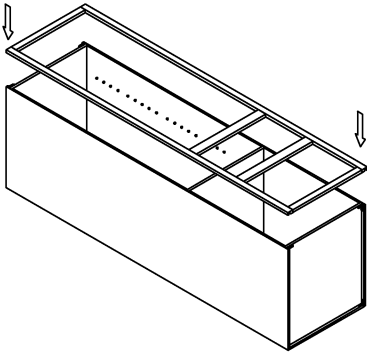


STEP 5

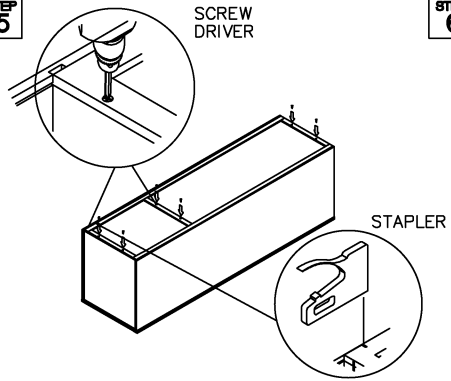


STEP 6

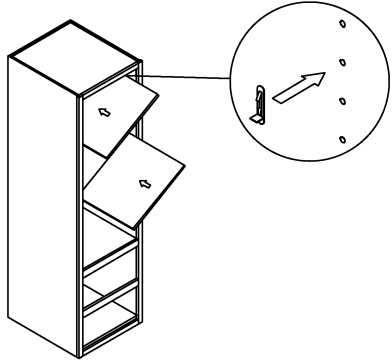


STEP 7

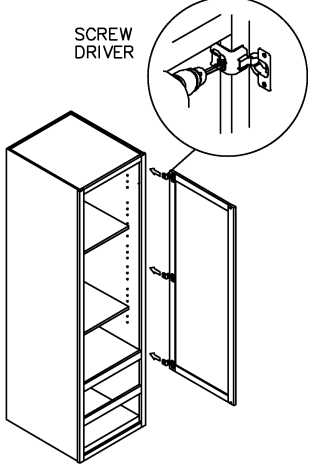


STEP 8

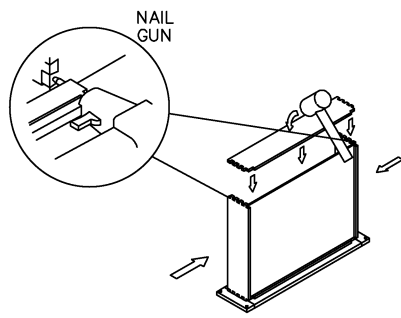

STEP 9

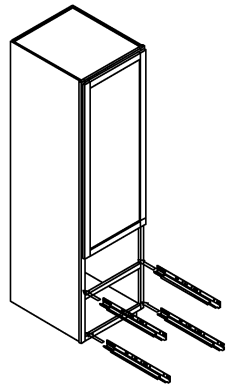

STEP 10

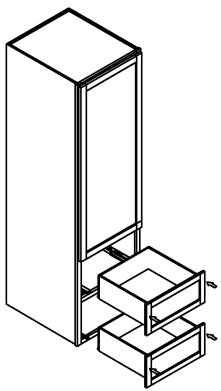

STEP 11

